



# AIR CONDITIONING AMPLIFIER

## COMPONENTS

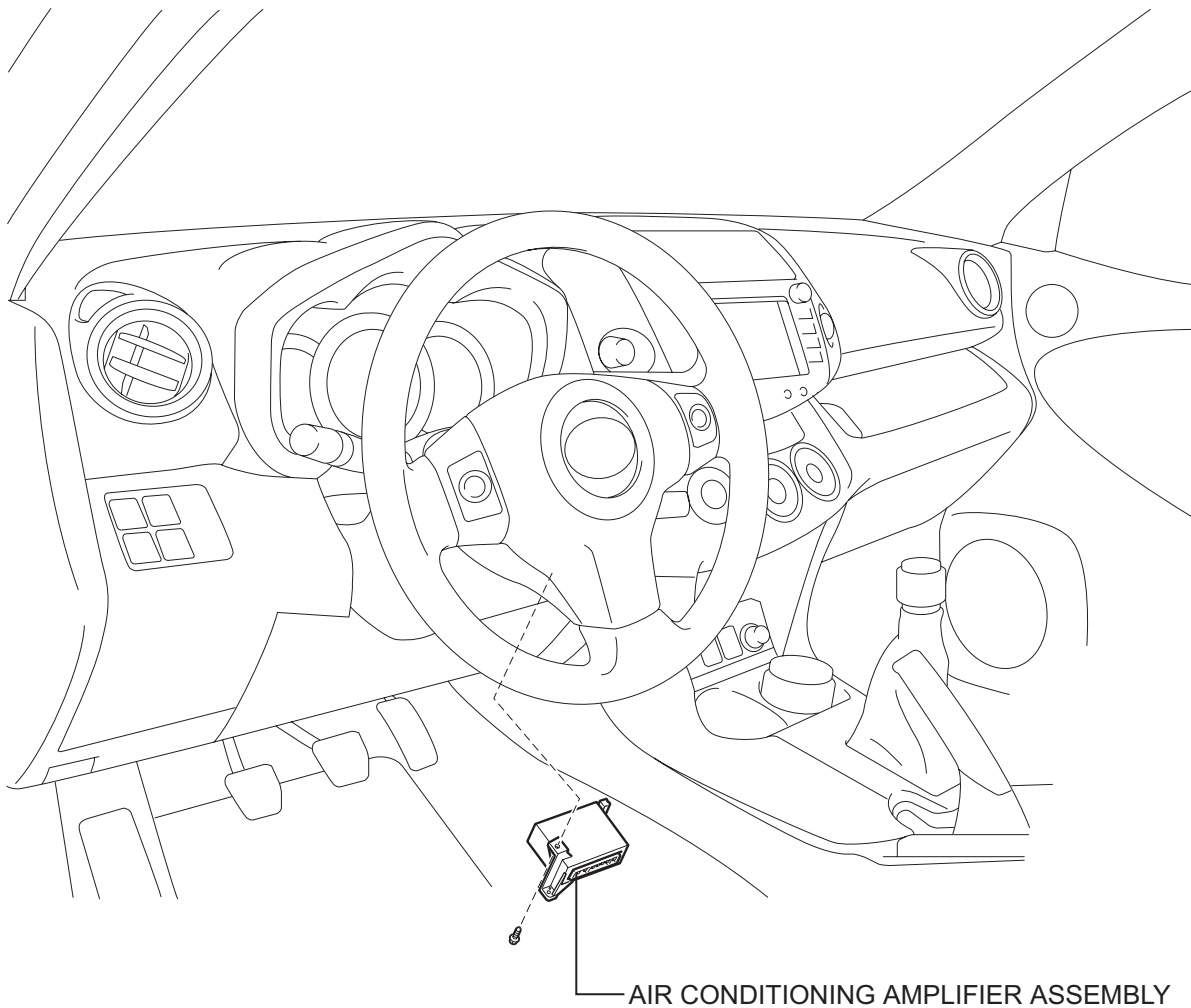


AC

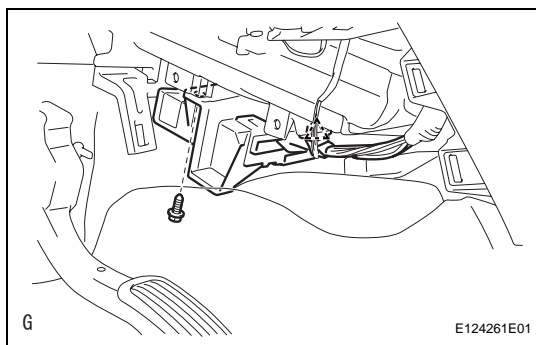

## REMOVAL

### 1. REMOVE AIR CONDITIONING AMPLIFIER ASSEMBLY

- (a) Detach the clamp.
- (b) Disconnect the connector.
- (c) Remove the screw and A/C amplifier.

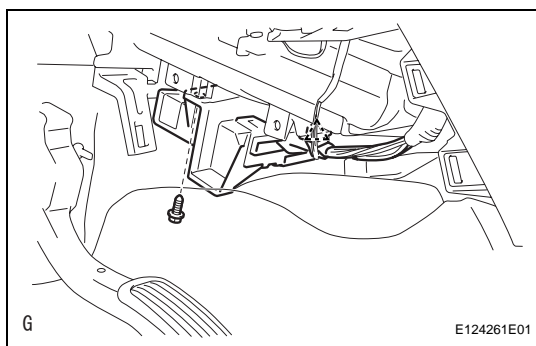

## INSTALLATION

### 1. INSTALL AIR CONDITIONING AMPLIFIER ASSEMBLY

- (a) Install the A/C amplifier with the screw.
- (b) Connect the connector.
- (c) Attach the clamp.